


EN

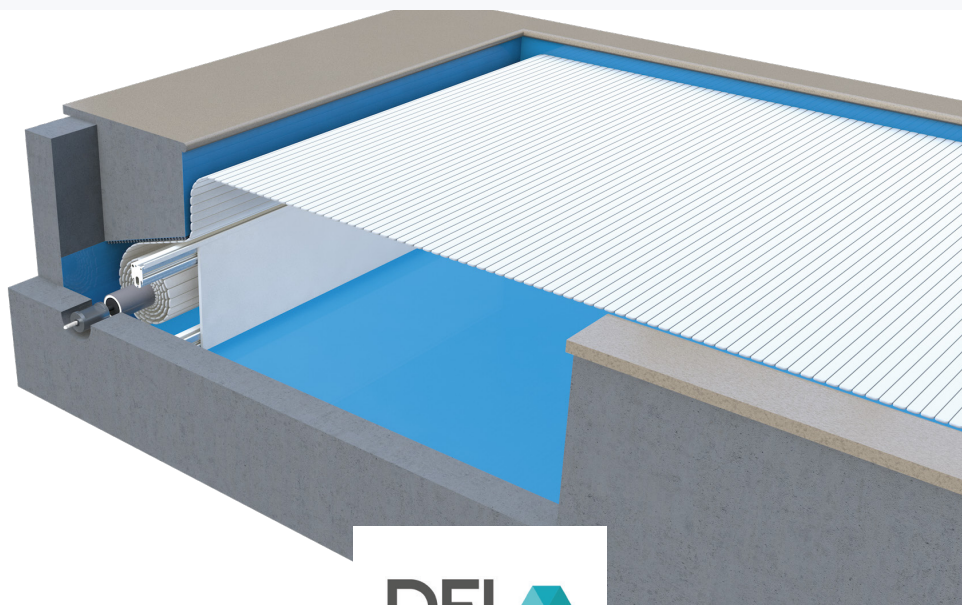

INSTALLATION GUIDELINES

INSTALLATION/SERVICING/MAINTENANCE/SAFETY ADVICE



DEL 

IN-GROUND POOL COVER

ROLLFIT DRY BOX VERSION

CONTENTS

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP THEM FOR FUTURE REFERENCE

Please read this manual carefully to help you understand all of the information and to ensure safe installation, use and servicing. We are not held liable for any damage arising due to a failure to respect the instructions set out in this manual.

DESCRIPTION.....	P.4
Components provided.....	p.4
Tools required for assembly.....	p.7
Packaging.....	p.8
Assembly.....	p.8
INFORMATION.....	P.9
INSTALLATION.....	P.10
Installation of parts to be sealed.....	p.10
Installing the motor side flange.....	p.12
Installing the free side bearing.....	p.12
Installing the rails.....	p.13
Installation of the reel system.....	p.16
Motor housing side waterproofing.....	p.17
Installing the motor.....	p.17
Beam support.....	p.20
Fitting counterweights.....	p.21
Fitting the beams.....	p.23
Fitting the gratings.....	p.24
Electrical control box.....	p.25
Wiring for aqua 1 control box with Wi-Key control.....	p.27
Wiring for aqua 1 control box with key switch control.....	p.28
Wiring for 6-pin connector – option.....	p.29
Wiring of Unibox 450 control box with Wi-Key command for motor DL 6010 / DL 7710.....	p.30
Wiring of Unibox 450 control box with key-operated enclosure for motor DL 6010 / DL 7710...	p.31
Wiring of the resistor enclosure on the Unibox 450 control box for motor PL 6010, DL 6010 / DL 7710.....	p.32
Wi-Key control.....	p.34
Calibrating the limit switches (MCA 120-MCA 250 motor).....	p.37
Automatic switch (MCA 120-MCA 250 motor).....	p.40
Verification of the control logic for the automatic switch.....	p.41
Rewinder model calibration (settings switch).....	p.42
Control period calibration (settings switch).....	p.42
Triggering sensitivity calibration (prog switch).....	p.42
Activation (prog switch).....	p.42
Test.....	p.43
General information / calibrating the limit switches (motor DL & PL).....	p.44


CONTENTS

After complete wiring	p.45
Programming mode	p.46
Automatic mode	p.47
SERVICING/MAINTENANCE.....	P.48
Info display	p.48
Intervention and troubleshooting	p.50
Water level in pool.....	p.55
Water filtration and treatment	p.55
Care (responsibility of the customer)	p.56
Maintenance (once per year minimum)	p.57
Wintering crank – option	p.58
Wintering	p.59
Pièces détachées.....	p.60
Spare parts	p.60
Troubleshooting guide.....	p.60
REGULATIONS.....	P.61
Warranty condition.....	p.61
SAFETY ADVICE	P.62
RECYCLING	P.64
Packaging	p.64
End of lifecycle	p.64


DESCRIPTION

COMPONENTS PROVIDED


▶ PART TO BE SEALED OF THE TUBE

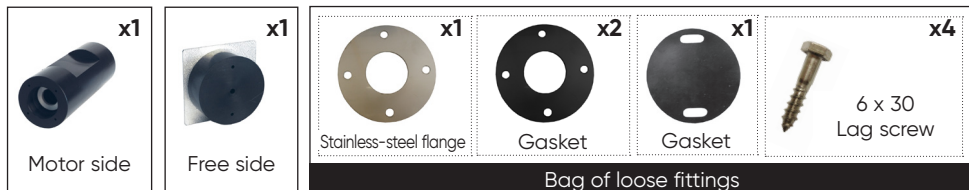


▶ INSTALLATION KIT

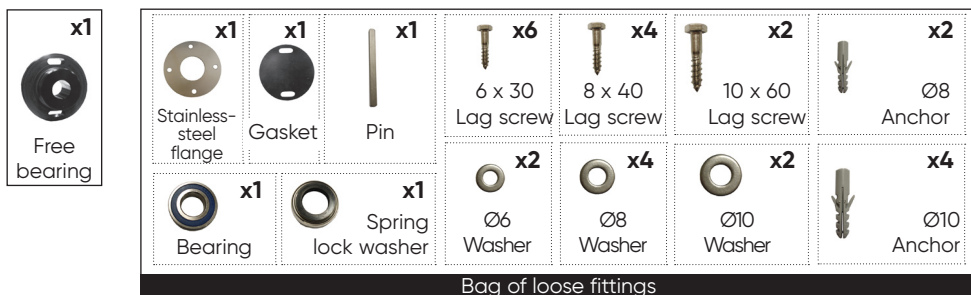

▶ MOTOR PROTECTION WITH BRACKETS

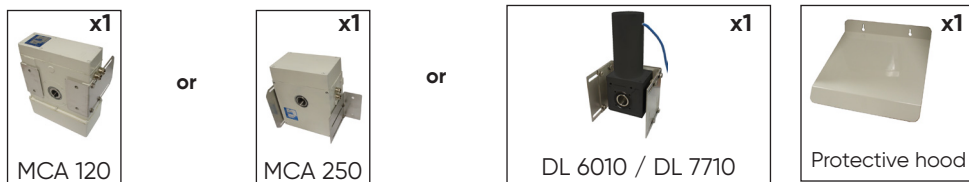


▶ ELECTRIC CONTROL BOX AND COMMAND CONTROL

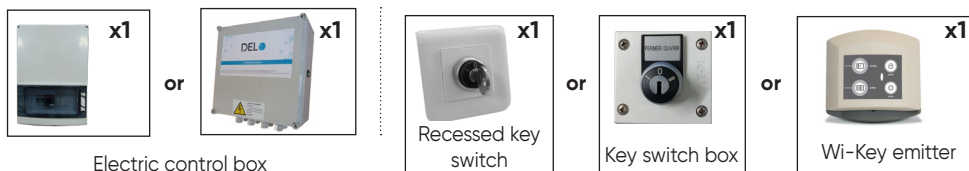


DESCRIPTION


THE COUNTERWEIGHT

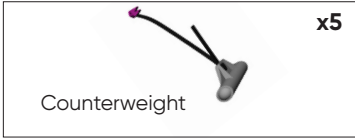


THE POLE

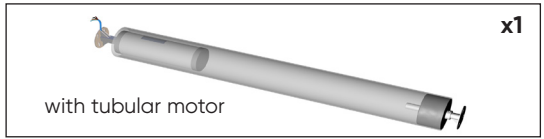





ATTACHMENTS - PINNED VERSION

 






BEAM

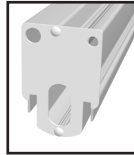





RAIL

   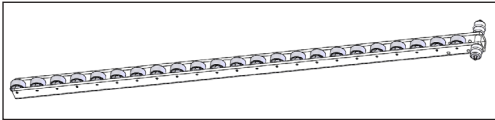

OPTION

       
 




BEAM SUPPORT

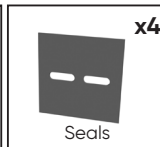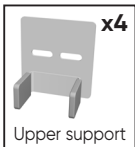

DESCRIPTION

  ▶ DECKING – Model according to order (1 pallet)











	Aluminium decking to be tiled
or	
	PVC

	PVC to be covered
or	
	PVC covered

DESCRIPTION

TOOLS REQUIRED FOR ASSEMBLY



	Meter and decameter		Screwdriver
	Level		Cutter
	Perforator	 N°10 - 13 - 17	Flat wrench
 Ø8/Ø12/Ø20	Concrete drill		Angle grinder
	Adjustable pliers		Hammer

DESCRIPTION

PACKAGING

e.g. - for a 5 x 10 m pool with Ø3 m Roman steps; The parts to be sealed:

For beam supports: 1 package of 1 x 0.20 x 0.20 m -- 10 Kg

For the mechanics (pole): 1 package of 0.30 x 0.20 x 0.20 -- 5 Kg

Mechanics (pole) with gear motor: 1 package of 5 x Ø0.25 m -- 50 Kg

Installation kit + box + counterweights + bracket kits: 1 package of 0.80 x 0.60 x 0.65 -- 35 Kg

Beam supports: 1 package of 0.75 x 0.25 x 0.15 / 4 Kg

The beams: 2 packages of 5.1 x 0.17 x 0.12 /60 Kg

Gratings: 1 pallet of 1.20 x 1 x 0.40 / 40 Kg

Total weight: 204 Kg

ASSEMBLY



2 persons




3 hours

INFORMATION

For pools made of concrete, aerated concrete, hollow and solid masonry, polystyrene, with tiling or reinforced membrane waterproofing.

The Rollinside is an automatic immersed cover consisting of a mechanical device and housing that is placed below the surface of the water.

- Opening and closing control is carried out via key button or Wi-Key located in a place from where the pool can be seen.
- The vertical and horizontal covering of the housing consists of several pieces of decking clipped onto beams.

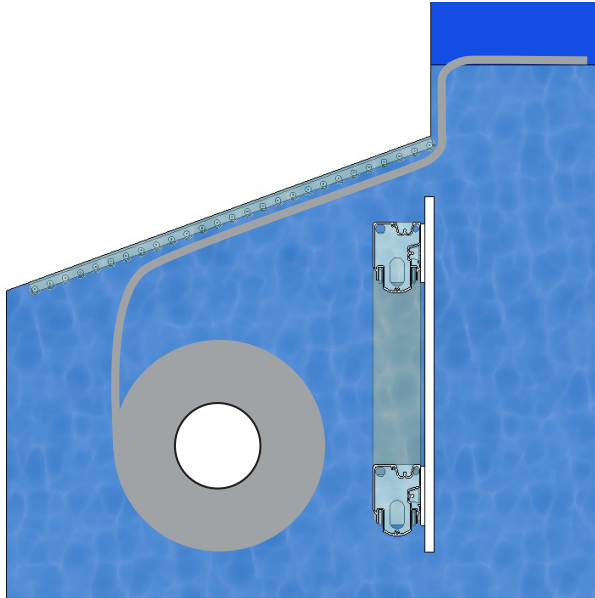

- **LED flaps on overflow pools are only compliant if the pool is fitted with a Vitalia INFINITY type device that automatically lowers the water level by at least 2cm when the flap is closed on the pool.**
- **Currently, LED shutters with a rEmovable form on side steps do not comply with standard NF P90-308.**
- **Unless otherwise specified by the manufacturer of the alarm, immersion alarms are not compatible with LED shutters.**

INSTALLATION

INSTALLATION OF PARTS TO BE SEALED

BRACKET FOR WINDER



motor side



 
Seal



Stainless steel flange



Lag bolt
6 x 30




free side



Seal


POSITIONING 1

POOL:
MAX WIDTH: 6 M
MAXIMUM LENGTH: 15 M


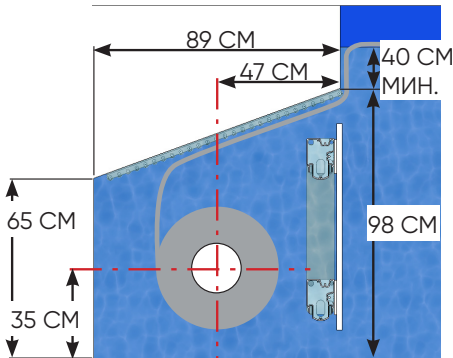


POSITIONING 2

POOL:
MAX WIDTH: 6 M
MAXIMUM LENGTH: 15 M

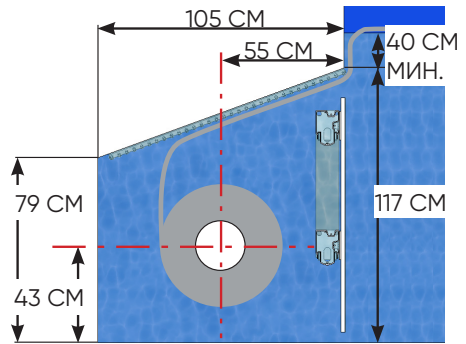


INSTALLATION

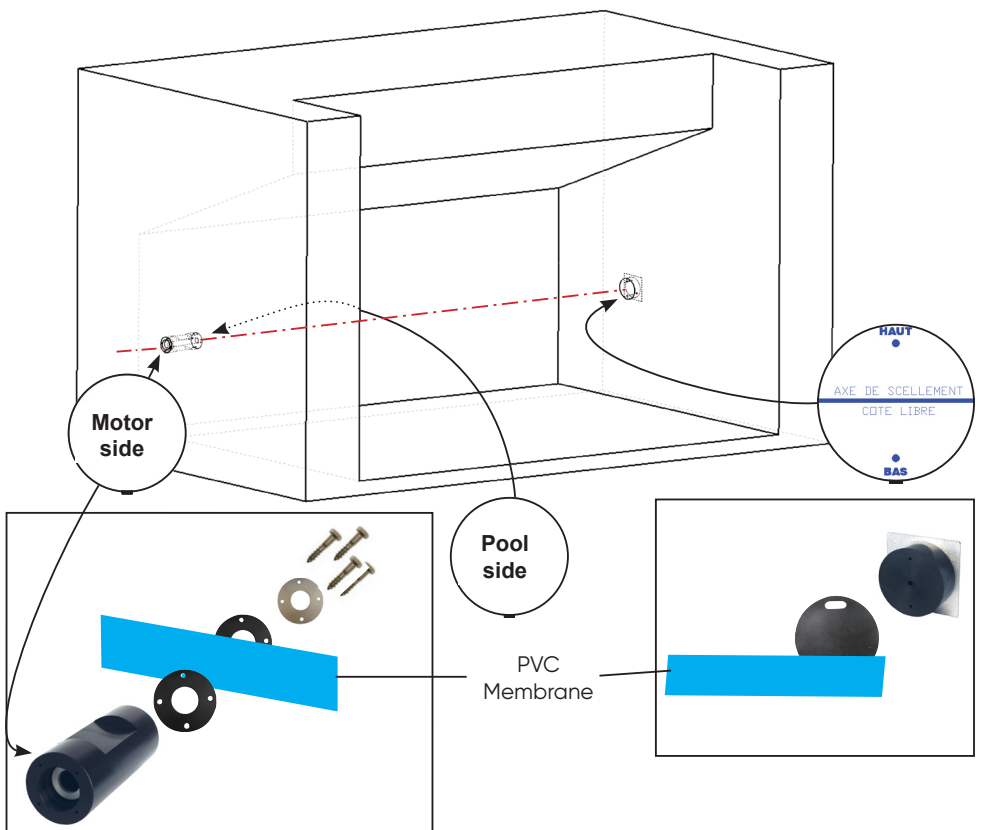
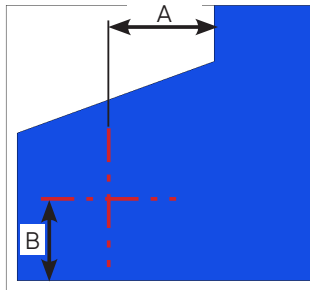


INSTALLATION

INSTALLING THE MOTOR SIDE FLANGE

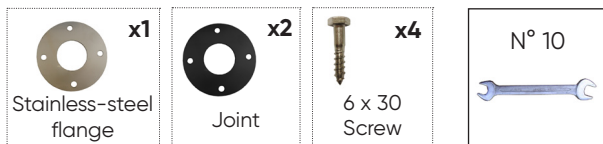

For any other type of waterproofing, do not use the N°1 Gasket.

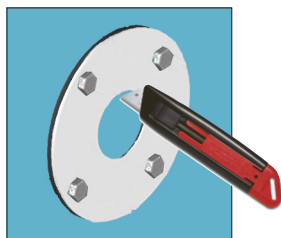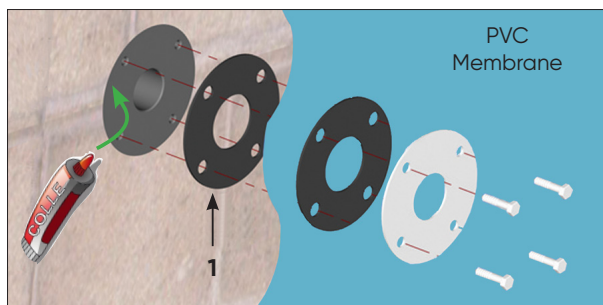

- Prime (around 20cm) before fastening the flange.
- Pierce the liner with an awl before bolting in.

INSTALLING THE FREE SIDE BEARING







For any other type of waterproofing, do not use the N°1 Gasket.



- Prime (around 20cm) before attaching the flange.
- Pierce the liner with an awl before bolting in.



INSTALLATION

INSTALLING THE RAILS

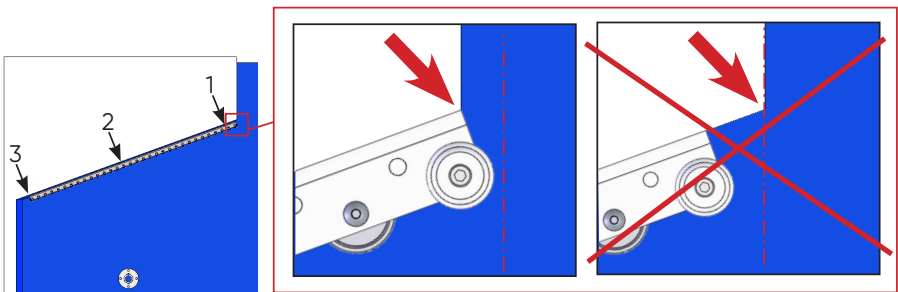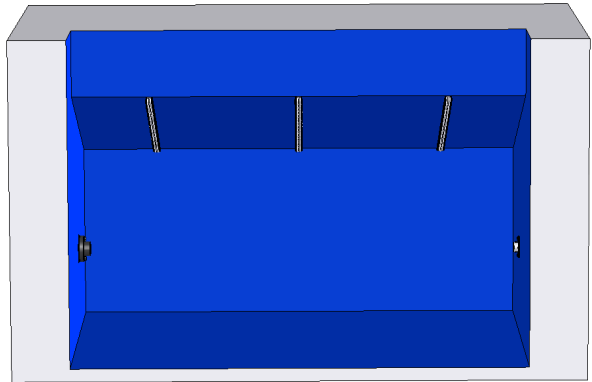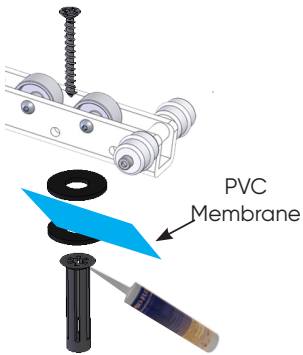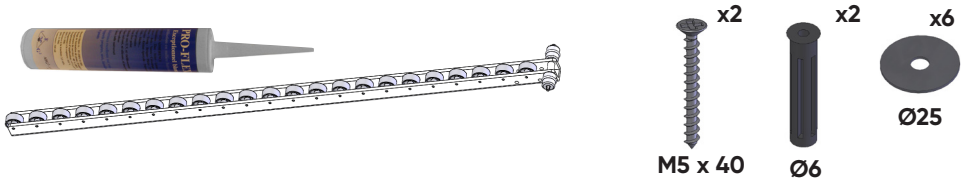

INSTALLATION




OPTION

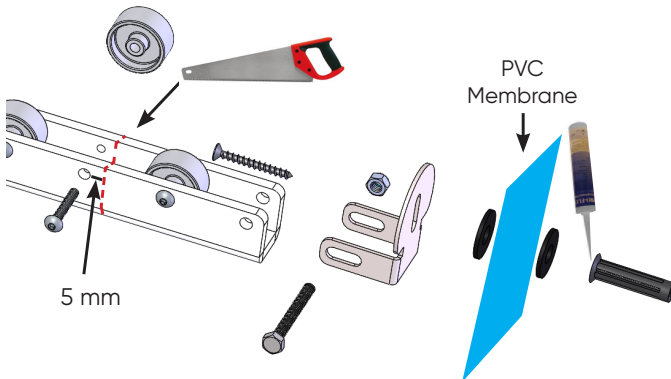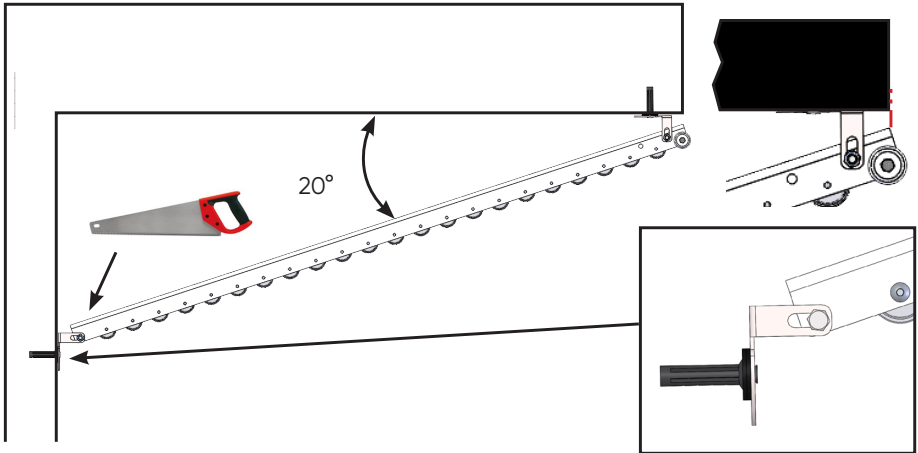

INSTALLATION

POSITIONING

maximum distance between 2 rails : 70cm

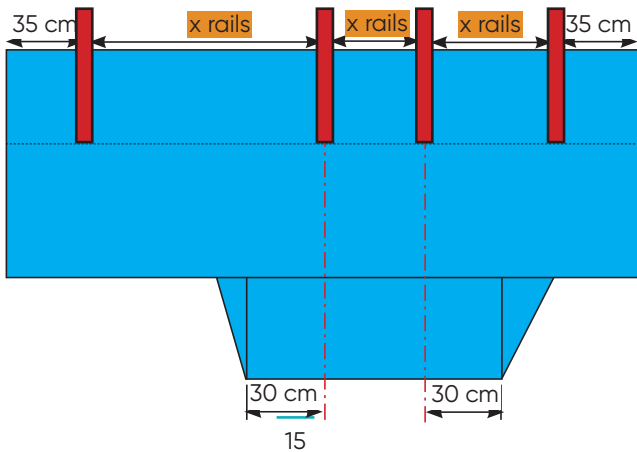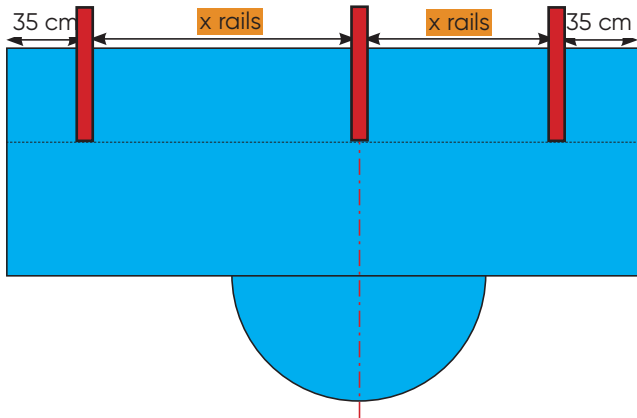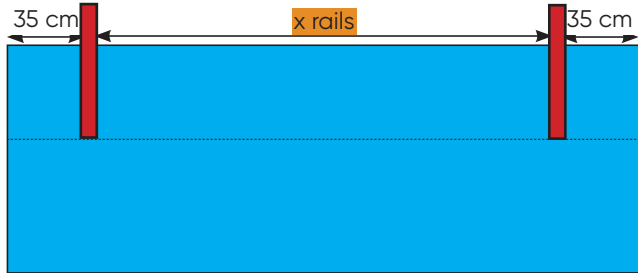

INSTALLATION

INSTALLATION OF THE REEL SYSTEM






Allen key male No. 4 **x1**

M6 switch head bolts **x5**

Ø6 PVC washer **x5**


Spacers **x5**


Bag of loose fittings

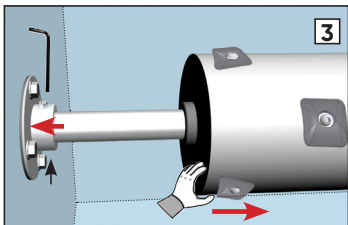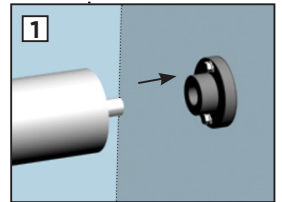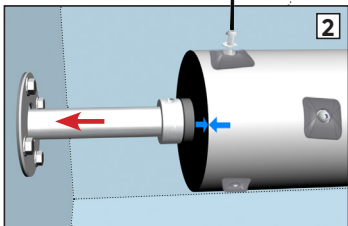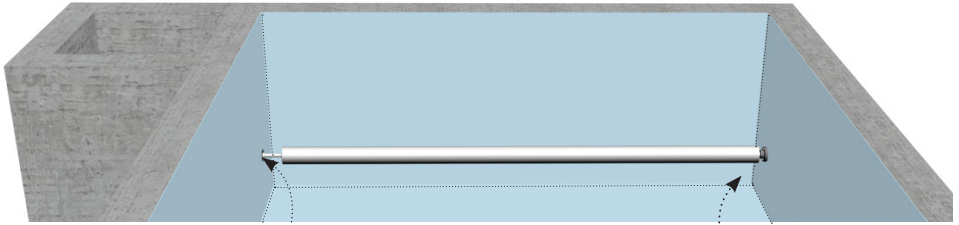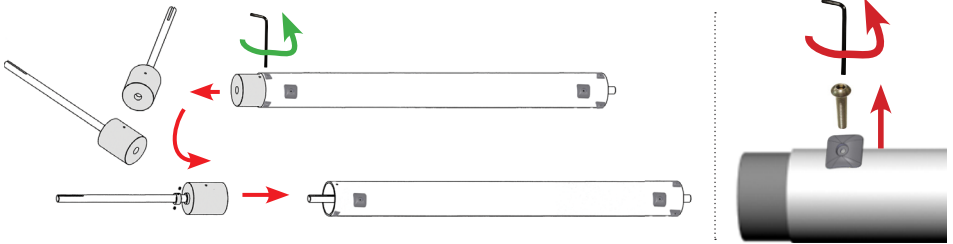


INSTALLATION

 MOTOR HOUSING SIDE WATERPROOFING




-  **The spring needs to rest against the rolling-element bearing**
- Grease the stainless-steel axis in order to put the rolling-element bearing on**
- Remove protective cap to pass shaft through spring**

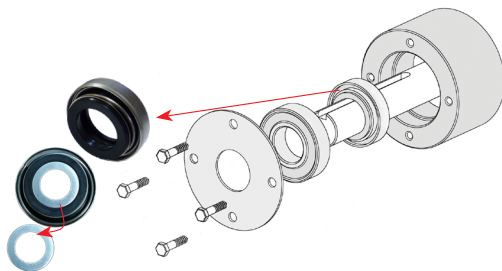

Do not use a hammer to assemble the spring washer and the rolling-element bearing, these will move into place when the flange is tightened

INSTALLING THE MOTOR

 
TURNING THE MOTOR BRACKETS



MCA120



 MCA250



DL 6010 / DL 7710



Note: The motor can be mounted in both directions.

INSTALLATION



▶ INSTALLING THE MOTOR



MCA 120



MCA 250

DL 6010 / DL 7710

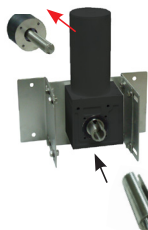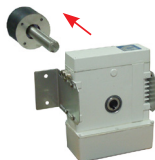

DL 6010

  
▶ FASTENING



MCA 120

MCA 250

DL 6010 / DL 7710

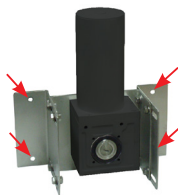


▶ INSTALLING THE PIN

MCA 120

MCA 250


DL 6010 / DL 7710

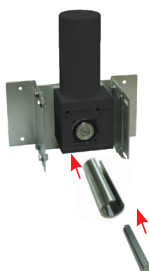

DL 6010

INSTALLATION

 ▶ INSTALLING THE PROTECTIVE HOOD FOR THE MOTOR



MCA 120



MCA 250







DL 6010 / DL 7710



Option: 6-pin connector "page 30"





INSTALLATION

BEAM SUPPORT

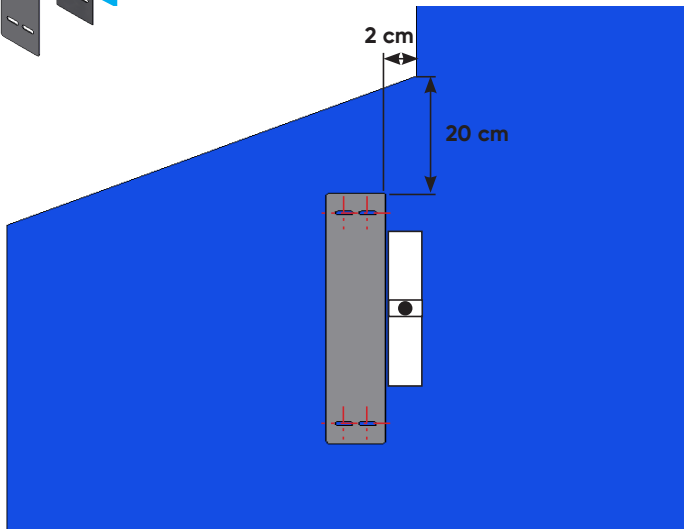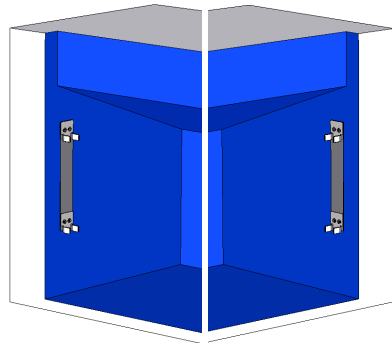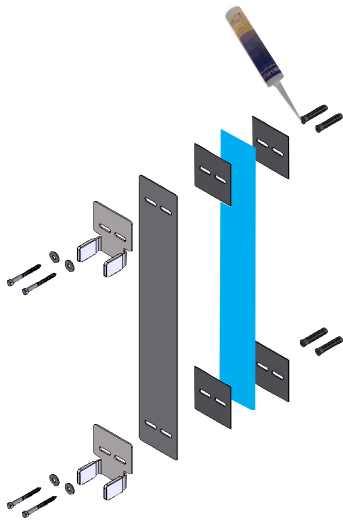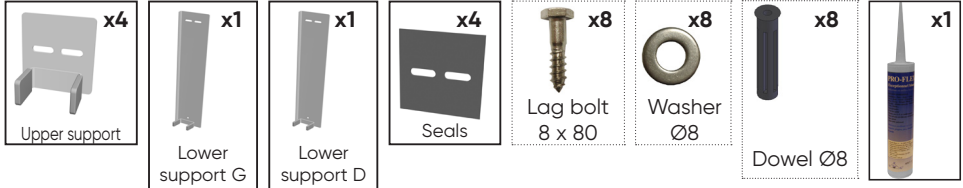



INSTALLATION

 FITTING COUNTERWEIGHTS

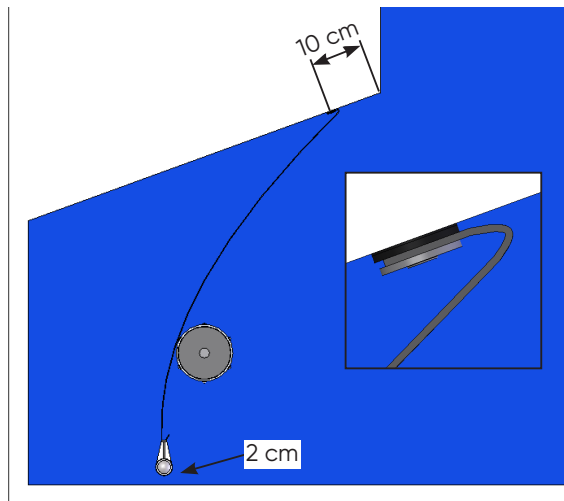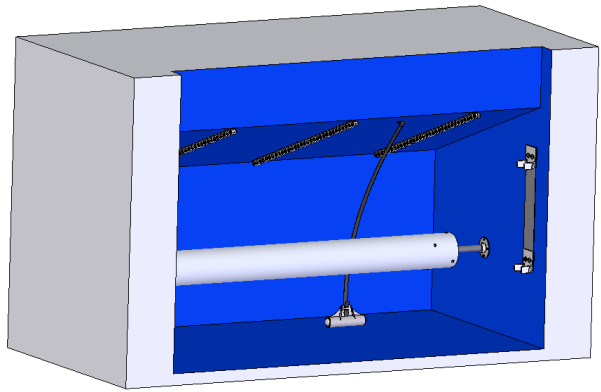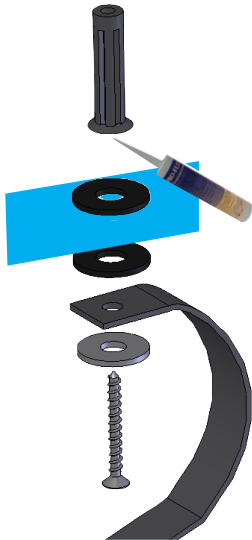


INSTALLATION

▶ STRAP ADJUSTMENT

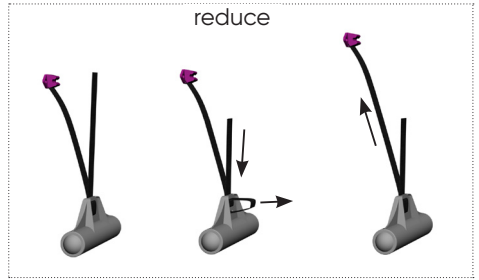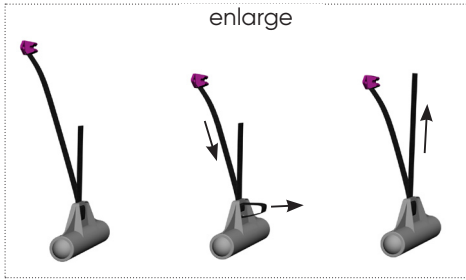


▶ DISTRIBUTION OF COUNTERWEIGHTS

Pools without steps




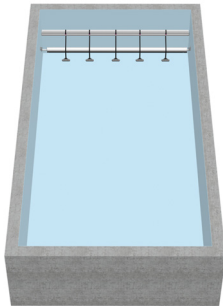


Pools with steps

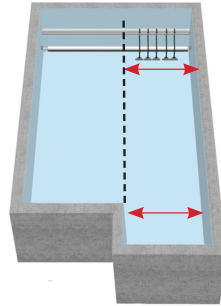



INSTALLATION

FITTING THE BEAMS

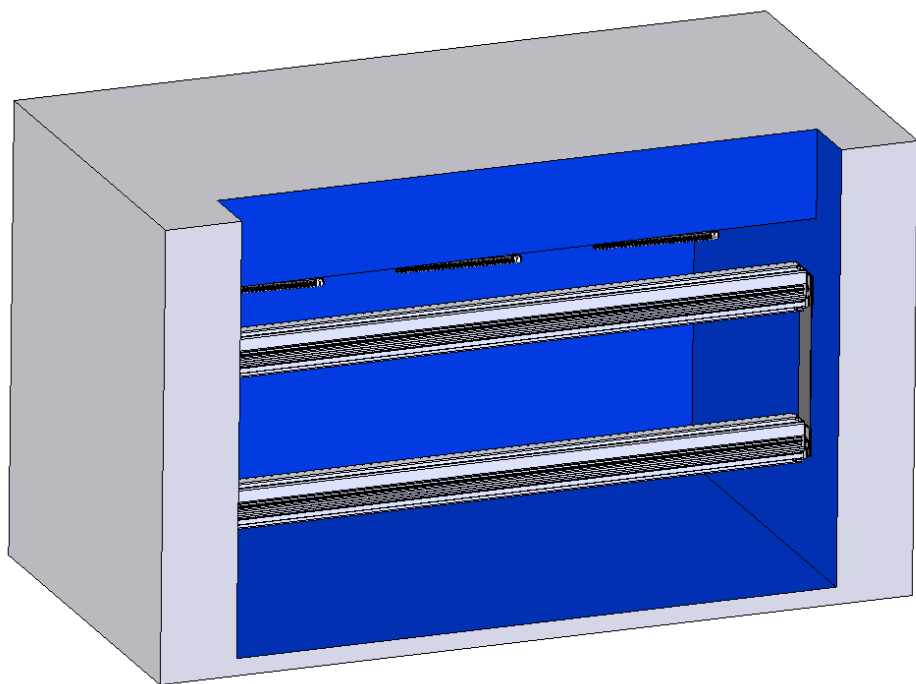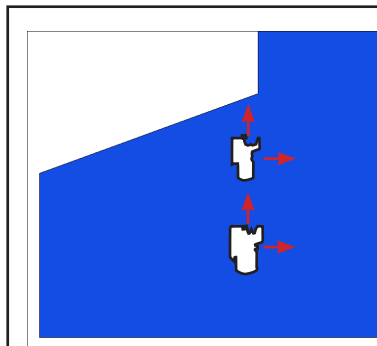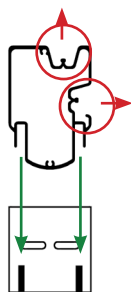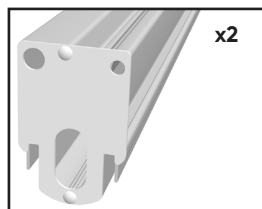

INSTALLATION

FITTING THE GRATINGS

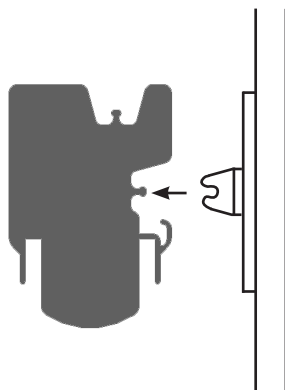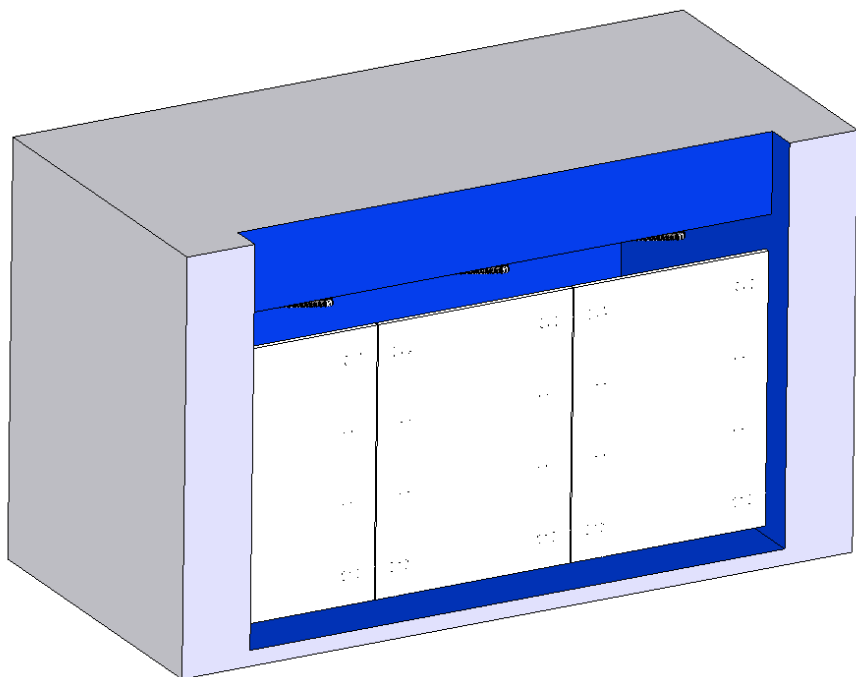

! Install the gratings after fitting the deck.


INSTALLATION

ELECTRICAL CONTROL BOX

► MOUNTING THE CONTROL BOX

- The installation must be carried out in accordance with the electrical standards in force in the country of installation; in France in accordance with standard NF-C 15-100 (part 7-702), in Europe in accordance with standard HD 384-7-702 or equivalent in accordance with local regulations.
- The control box must be mounted on a wall in a frost-free technical room, away from rain, sunlight, any source of heat and any risk of it being sprayed or submerged, in an easily accessible location.
- It must be installed level, ideally between 1.2 metres and 1.5 metres above the ground, vertically, with the Câble glands facing downwards and on a wall that is sufficiently solid, flat and smooth to withstand the weight of the control box.
- The control box must be securely fixed to the wall using the screws and plugs supplied.
- Be careful if you decide to fix your control box by any other means, as the guarantee may not apply. Please note that adhesives are not considered a reliable means of fixing.

Note: Use the mounting template provided with the control box.

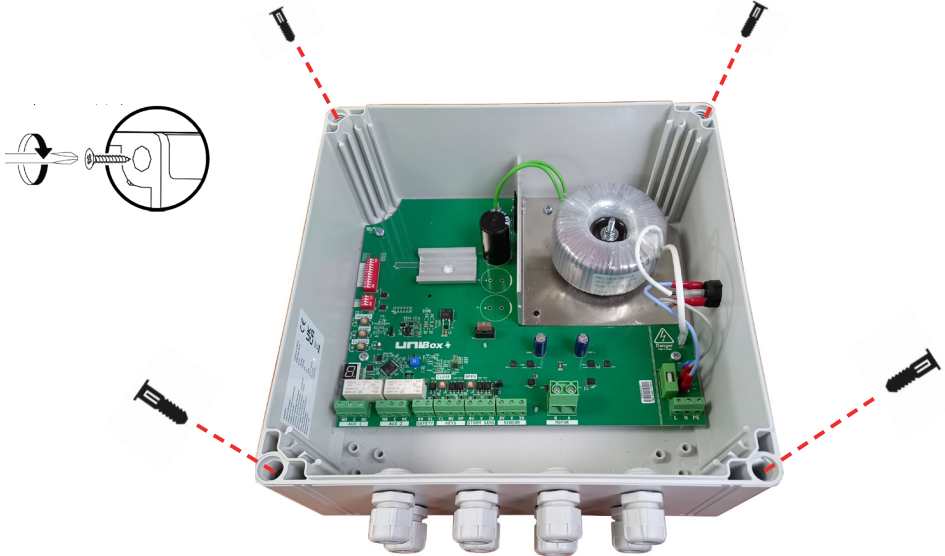

**No warranty if box is drilled.
If the enclosure is drilled, be sure to seal the fixings.
Use the fixings supplied with the box to maintain the IP rating.**

INSTALLATION

The electrical connection of the equipment must only be carried out by a qualified professional, and they must comply with the manufacturer's instructions in addition to the following applicable standards and regulations:

- NF C15-100: Low voltage electrical installations.
- CEI 60364: Electrical installations for buildings.

Please refer to the leaflet enclosed with the control box to ensure correct installation.



Incorrect installation may result in an electric shock, or it may damage the unit. We recommend that you disconnect the control box from the electricity supply prior to any work being carried out on it.

Any specific electrical supply line must be protected by a 30 mA circuit breaker along with a sufficient overcurrent protection control box.

We recommend use of a shielded cable with a nominal cross-section that is not lower than the one indicated in the following table:

Current rating of unit A	Nominal cross-section mm ²
≤0.2	Flat twin tinsel cord a
> 0.2 and ≤ 3	0.5 a
> 3 and ≤ 6	0.75
> 6 and ≤ 10	1.0 (0.75) b
> 10 and ≤ 16	1.5 (1.0) b
> 16 and ≤ 25	2.5
> 25 and ≤ 32	4
> 32 and ≤ 40	6
> 40 and ≤ 63	10

NOTE: For power cables supplied with poly-phase units, the nominal cross-section of the conductors is based on the maximum cross-section of the phase conductors at the end of the power cable that is intended to be connected to the terminals of the unit.


- a These cables can only be used if their length, as measured between the point where the cable or cable protector enters the equipment and the connection to the mains supply, does not exceed 2 m.
- b Cables that have the cross-section indicated in brackets can be used for mobile units if their length does not exceed 2 m.

INSTALLATION

! Ensure that there is no-one in the pool when carrying out the operation.

WIRING FOR AQUA 1 CONTROL BOX WITH WI-KEY CONTROL


*see comments and diagrams on page 33

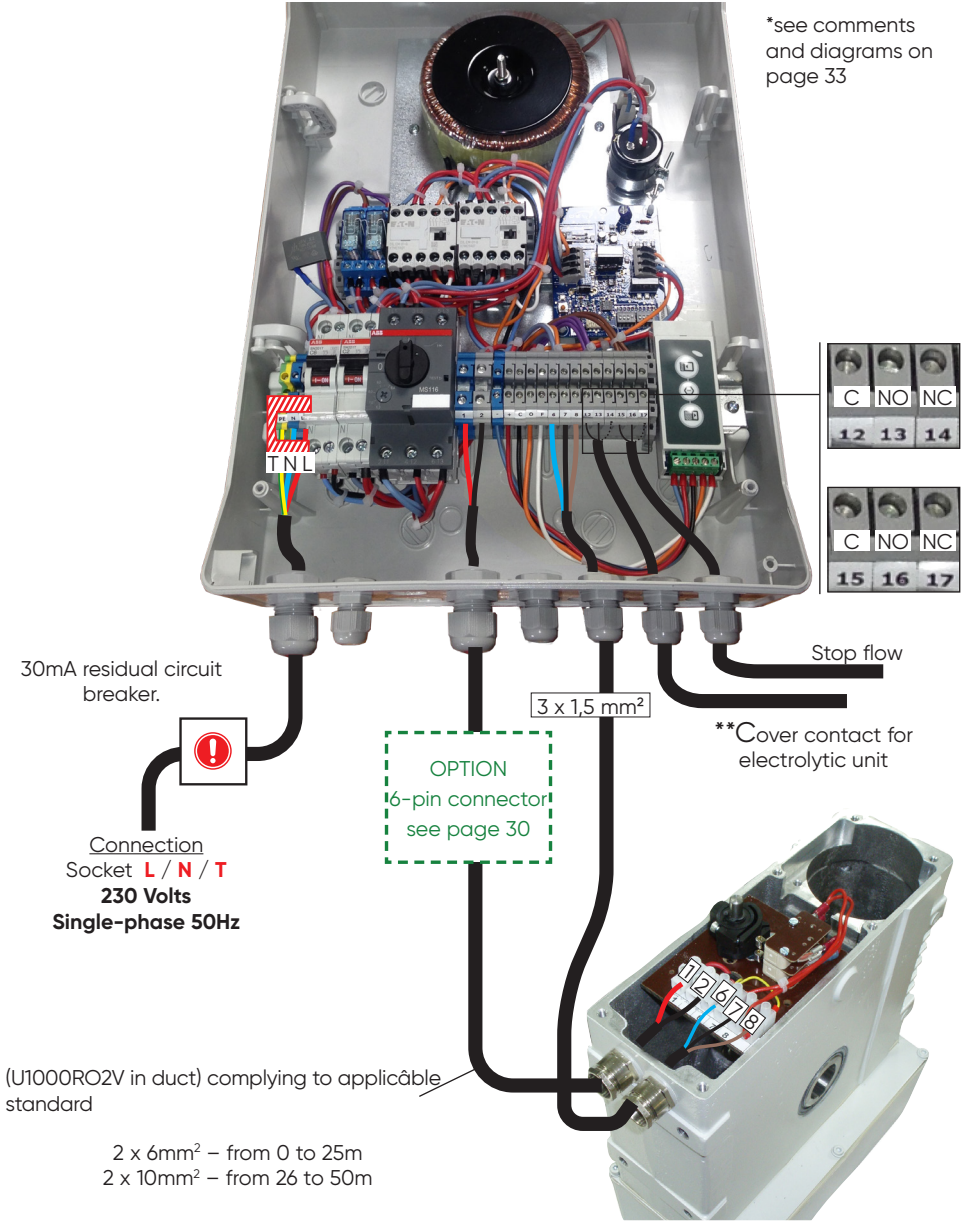

INSTALLATION

WIRING FOR AQUA 1 CONTROL BOX WITH KEY SWITCH CONTROL

*see comments and diagrams on page 33

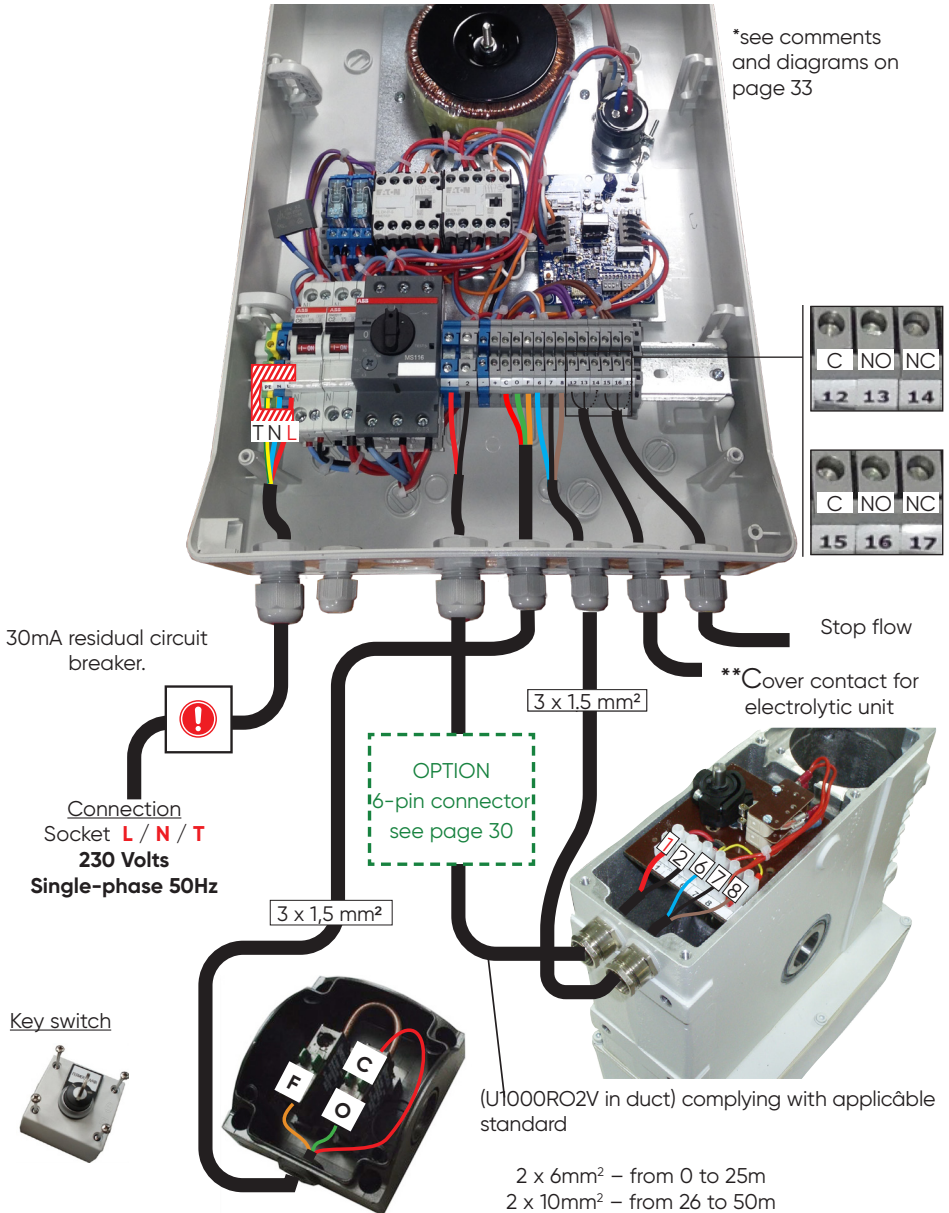


INSTALLATION

WIRING FOR 6-PIN CONNECTOR – OPTION



The connector allows you to disconnect the geared motor very quickly, without any need to carry out any operations on the electrical wiring.

For Wintering, replace the geared motor with the Wintering lever.

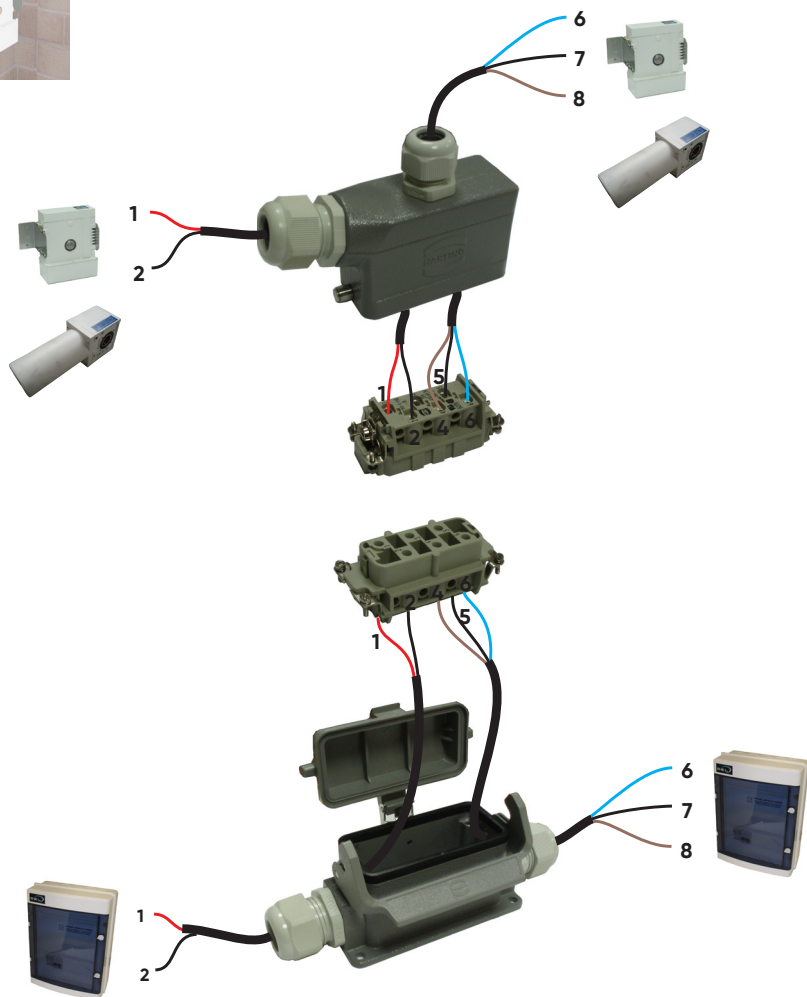


INSTALLATION

WIRING OF UNIBOX 450 CONTROL BOX WITH WI-KEY COMMAND FOR MOTOR DL 6010 / DL 7710



- Ensure that there is no one in the pool during the maneuver.
- All connections must be made with the power off

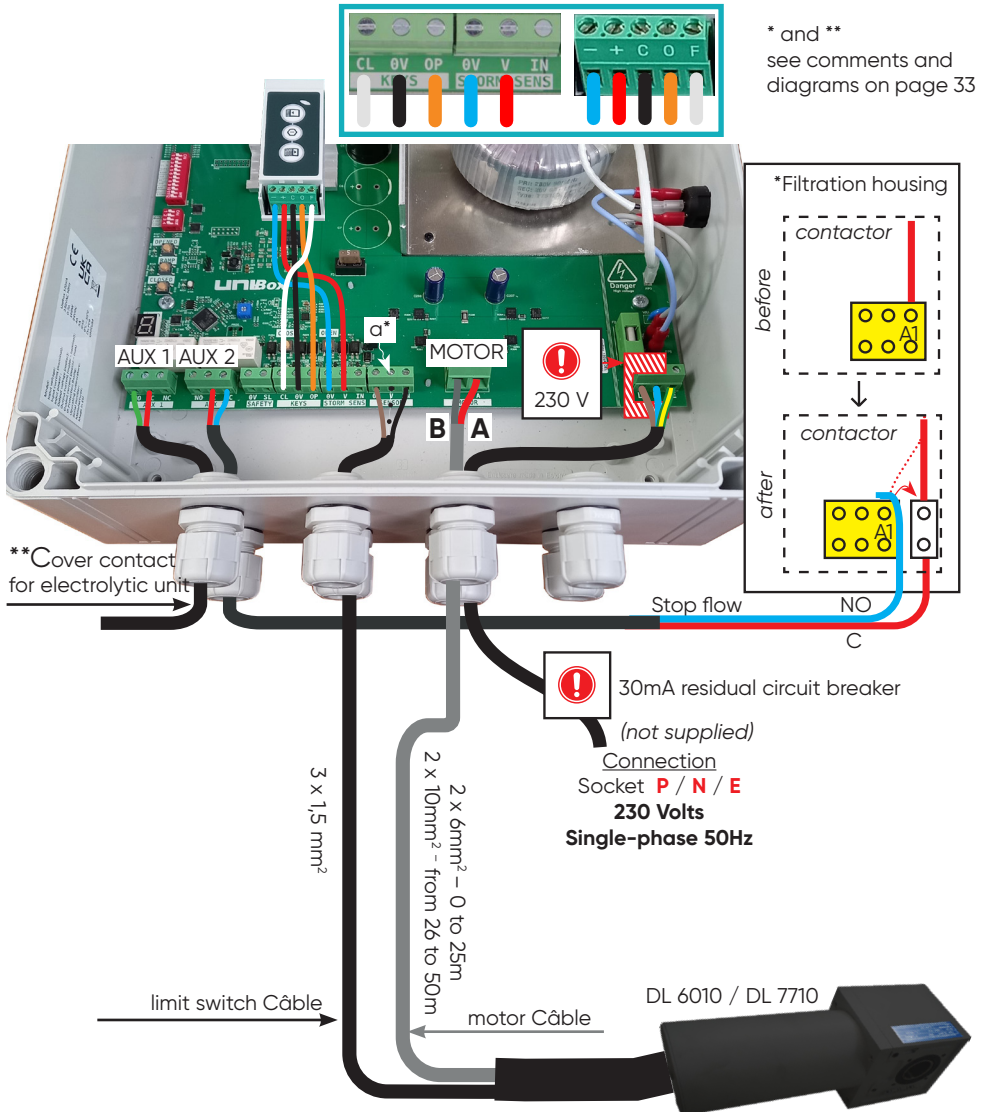


* and ** see comments and diagrams on page 33


INSTALLATION

WIRING OF UNIBOX 450 CONTROL BOX WITH KEY-OPERATED ENCLOSURE FOR MOTOR DL 6010 / DL 7710

- ⚠️ • Ensure that there is no one in the pool during the maneuver.
- All connections must be made with the power off

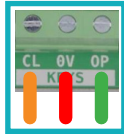

* and **
see comments and
diagrams on page 33


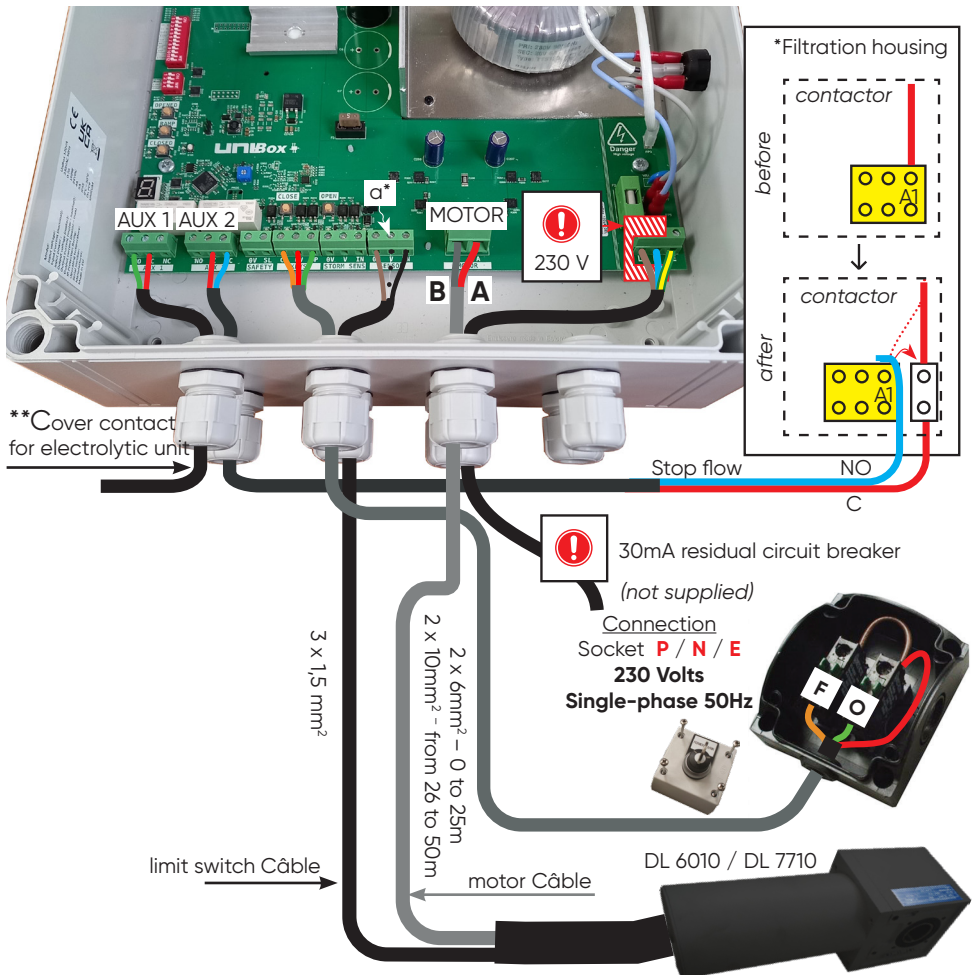


INSTALLATION

WIRING OF THE RESISTOR ENCLOSURE ON THE UNIBOX 450 CONTROL BOX FOR MOTOR PL 6010, DL 6010 / DL 7710



- Ensure that there is no one in the pool during the maneuver.
- All connections must be made with the power off

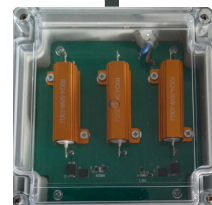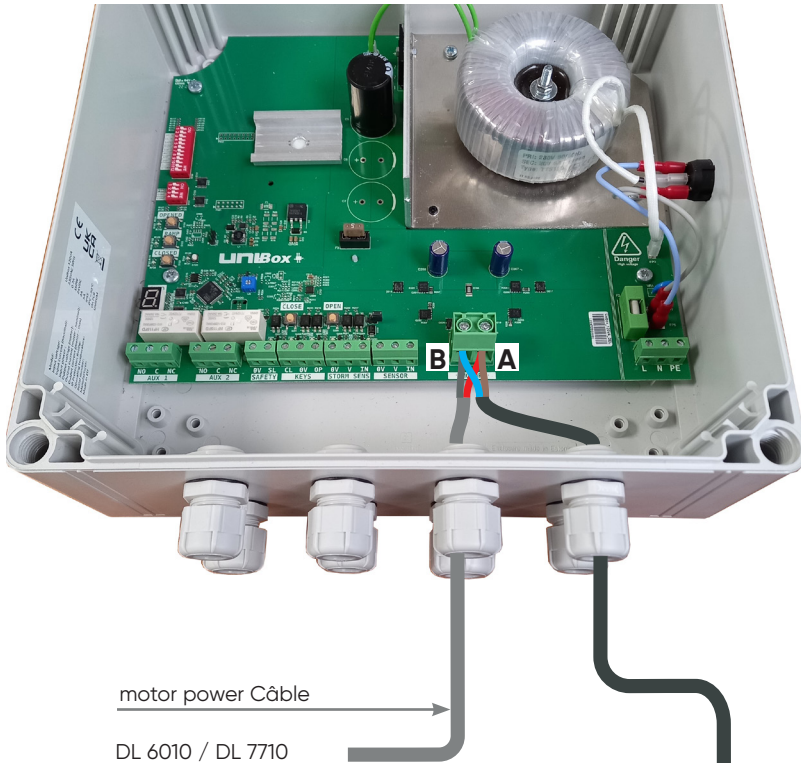

Resistor control box

INSTALLATION

* "AUX2 terminal block Piloting the filtration pump.


When the cover is moving: Contact C-NC open (stop filtration) and contact C-NO closed (filtration).

Filtration control box :

BEFORE



AFTER

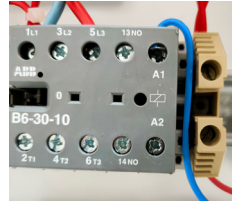

** "AUX1" terminal block electrolyser control

Closed: Contact C-NO closed and contact C-NC open


Open: Contact C-NO open and contact C-NC closed

The position of the dry contact is saved in the memory in case power to the control box is ever switched off.


α* : Wire may or may not be present according to the type of motor.

Motor connection according to sensor type

2-wire motor sensor
(mechanical sensor)

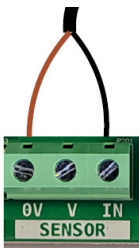

3-wire motor sensor
(inductive sensor)

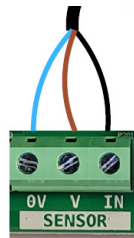

Remember to change jumper pinout.



Its location must allow you to check that no-one has entered the pool during the operation.





We advise you to put some waterproofing gel in the Junction box once the wiring is completed.

INSTALLATION

WI-KEY CONTROL



Flashing red/green = emitter locked
See emitter unlocking procedure page 37

	 Receiver	 Emitter
Manufacturer	DEL	DEL
Reference	Wi-Key receiver	Wi-Key emitter
Category	3 (EN 300220-1)	2 (EN300220-1)
Range	50 m open field range	50 m open field range
	25 m through a concrete wall	25 m through a concrete wall
Power supply	12 to 48 Vcc 30mA max	2 batteries, 1.5V AAA
Protection rating	IP40	IP54

The emitter must be set outside of the volume 0 position (volume 0 is the part that is underwater, even if immersion is temporary).

The distance between the emitter and the receiver must not exceed:


- 50m open field range
- 25m behind a single wall
- 15m behind multiple walls or a particularly thick wall.

Frequency bands used by the emitter-receiver: 868MHz to 868.6MHz

Maximum power of the radiofrequency: 10mW

We advise you to check the emitter-receiver connection prior to fastening the elements into place.


INSTALLATION

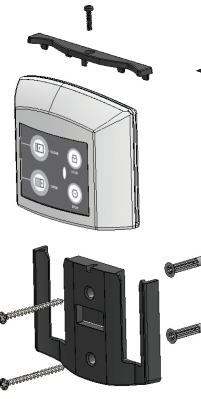





←

- It must be located in a place that allows the operator to check that no-one is in the pool during the operation.
- It is compulsory for the locking "bar" to be installed and bolted into place.
- Before fastening the control box, ensure that the emitter is communicating with the receiver.

← The bracket must be fastened to a fixed base.




 Close  Open  Lock keypad  Stop current operation

CONNECT A NEW EMITTER

Receiver

1

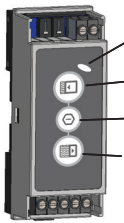

Indicator light
F
STOP
O

Press "STOP" and hold the switch down, then press "O" for more than 3 seconds OK when the "Indicator light" flashes green.

Connection of a new emitter must be carried out within the following 30 seconds.

INSTALLATION

Emitter

2




Press "STOP" and hold the switch down, then press "O" for more than 3 seconds OK when the "Indicator light" flashes red/green.

Connection of a new emitter must be carried out within the following 30 seconds.

▶ LOCK WI-KEY

- Hold  for more than 3 seconds until the indicator flashes





 = **system locked**

▶ UNLOCK WI-KEY

- Press  and hold
- At the same time: press successively on the following three switches:



- The  indicator light remains on  = **emitter unlocked**

	Green LED	--->	Wi-Key unlocked
	Flashing green/red LED	--->	Wi-Key locked
	Orange LED	--->	Battery level low
	Red LED	--->	Batteries need to be changed (2xLR03)



INSTALLATION

CALIBRATING THE LIMIT SWITCHES (MCA 120-MCA 250 MOTOR)


! Any person carrying out work on the electrical parts must be qualified and wear PPE (personal protective equipment): gloves, goggles, mat, etc...

▶ CHECKING THE POSITION OF THE LIMIT SWITCH CAMS

▶ UNSCREW THE CAM LOCKING BOLTS

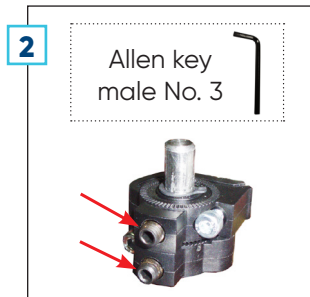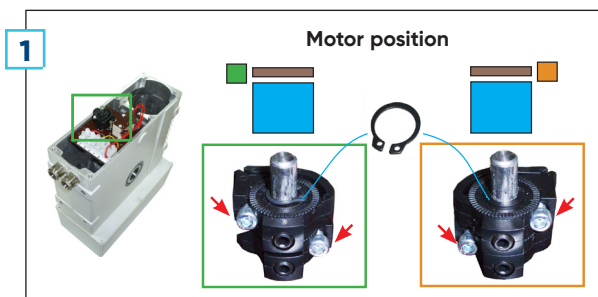


▶ DEACTIVATE THE AUTOMATIC SWITCH

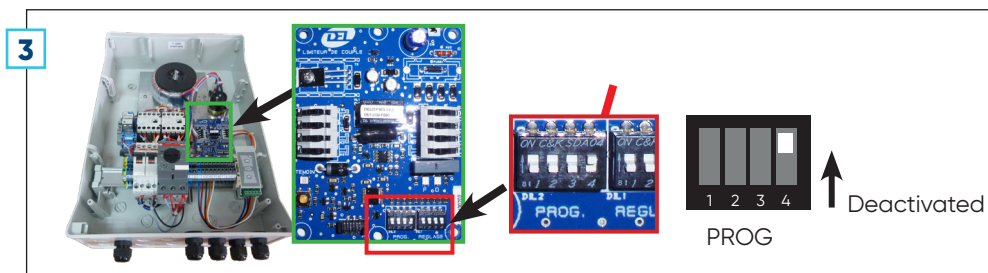

! Warning: use of the pool cover control switches present in the housing (Wi-Key receiver) must only be carried out by a person who is absolutely certain that there is no risk and that no-one will enter the pool during the operation.



INSTALLATION

➤ VERIFICATION OF THE CONTROL LOGIC

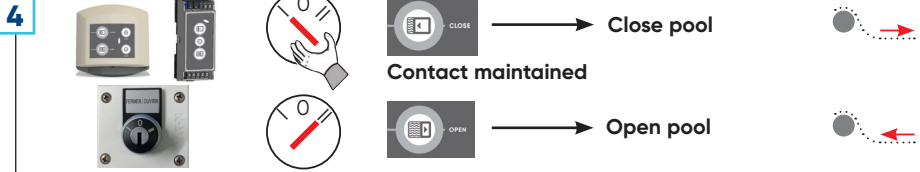


If the control logic is not respected, check the wiring of the installation.


➤ PUT THE COVER INTO THE "POOL OPEN" POSITION

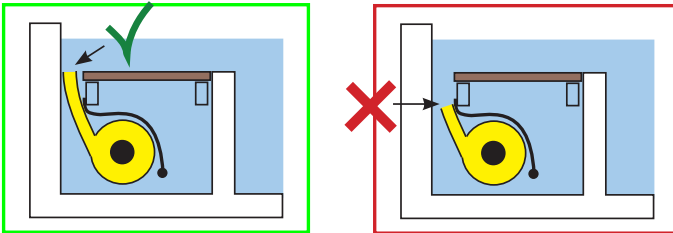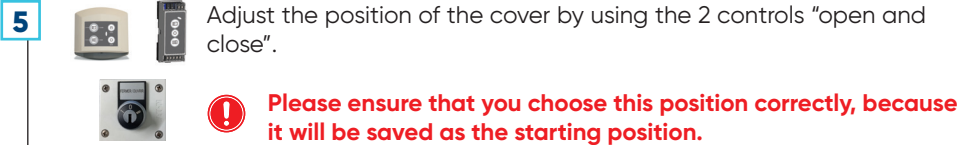

➤ MEMORISE THE "POOL OPEN" POSITION

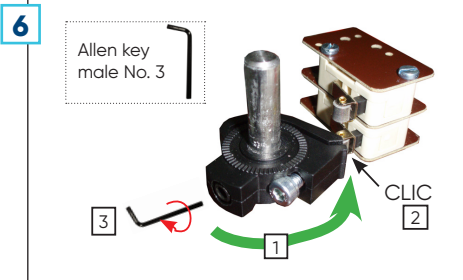

OR

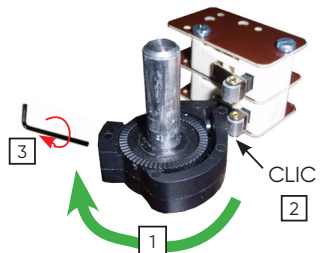

INSTALLATION

▶ PUT THE COVER INTO "POOL CLOSED" POSITION

7




Adjust the position of the cover by using the 2 controls "open and close".



Warning: the last control used must be to close the pool.

If the cover does not close, check the control logic and start the whole liMIT switch calibration procedure again.

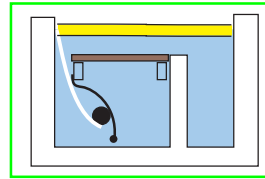


Note: Except for MCA gearmotor.


▶ MEMORISE THE "POOL CLOSED" POSITION

8


Allen key
male No. 3

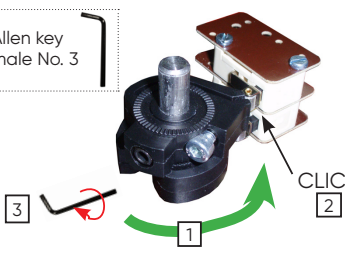

OR

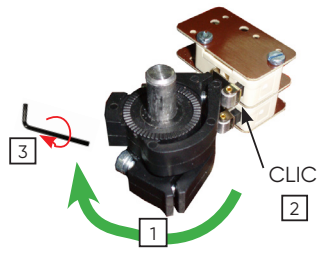

▶ ADJUSTING THE LIMIT SWITCH CALIBRATION

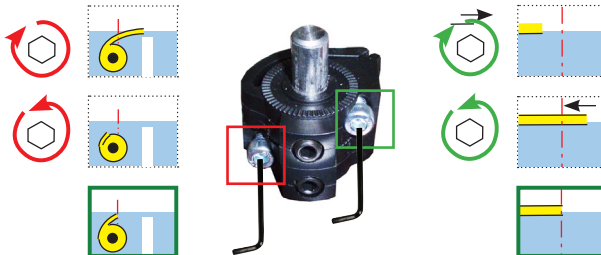


INSTALLATION

AUTOMATIC SWITCH (MCA 120-MCA 250 MOTOR)

The automatic switch protects the system from any potential oversights with regard to the unlocking of the fastening control boxes, when the pool is opened. If the cover is blocked, the motor will stop automatically.

The different reasons for a blockage:

- Fastening control boxes have not been unlocked.
- The cover is scraping (on a beam, on the pool rim...).
- Presence of an object in the pool (robot, counterweight...) that is blocking the cover.

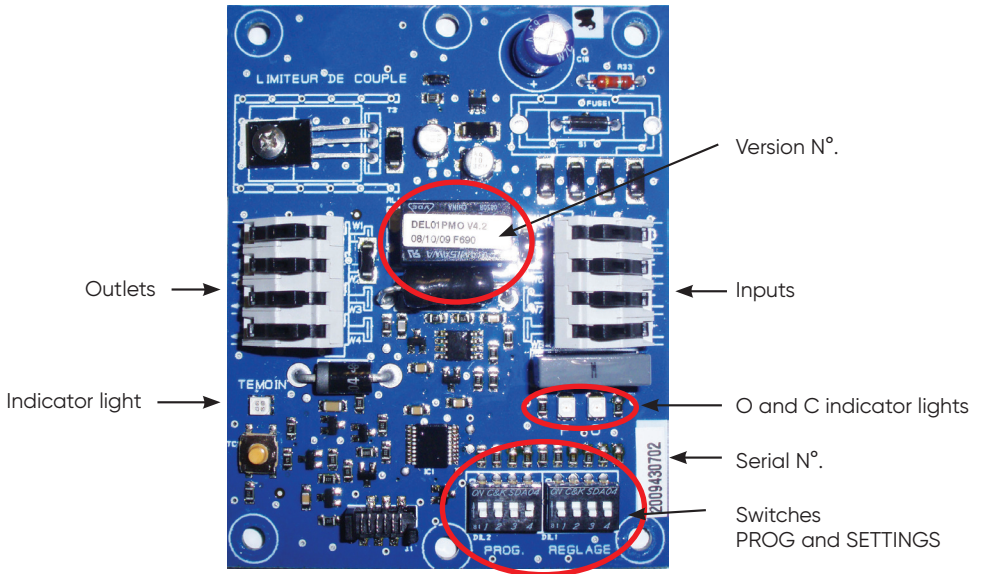


INSTALLATION


VERIFICATION OF THE CONTROL LOGIC FOR THE AUTOMATIC SWITCH

! Any person carrying out work on the electrical parts must be qualified and wear PPE (personal protective equipment): gloves, goggles, mat, etc...

▶ DEACTIVATING THE AUTOMATIC SWITCH

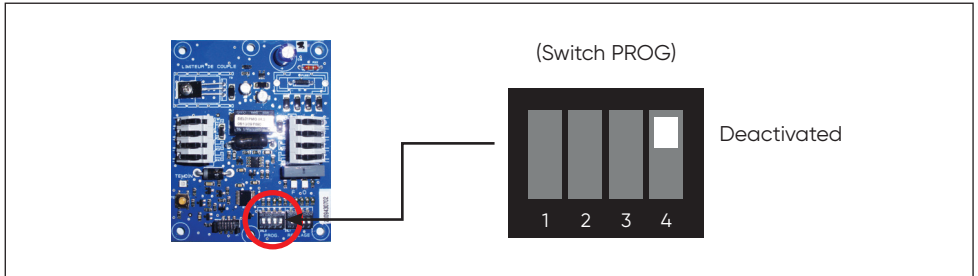

▶ VERIFY

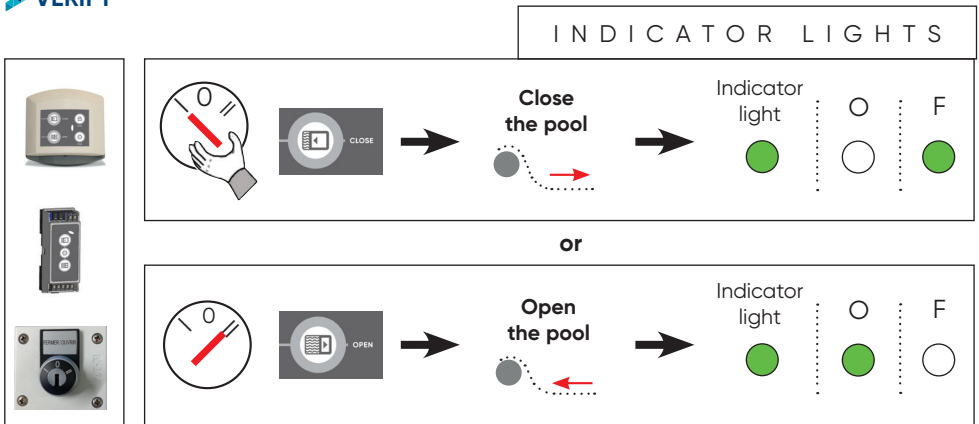

! If the control logic is not respected, check the wiring of the installation.

INSTALLATION

REWINDER MODEL CALIBRATION (SETTINGS SWITCH)



CONTROL PERIOD CALIBRATION (SETTINGS SWITCH)

L = pool length including stairs

$L \leq 12$ m



30 seconds

$L > 12$ m



60 seconds



TRIGGERING SENSITIVITY CALIBRATION (PROG SWITCH)

l = pool width



$l \leq 3$ m



$l \leq 4$ m



$l \leq 5$ m



$l \leq 6$ m



$l \leq 7$ m



$l \leq 8$ m



$l \leq 9$ m



$l \leq 10$ m



Maximum sensitivity

Minimum sensitivity

ACTIVATION (PROG SWITCH)



Failure to activate the automatic switch can cause serious damage to the motor, the control box and the slats, which will affect the warranty.



Activated



INSTALLATION

IMPORTANT

Contact maintained for more than 3 secs

=

The next opening will be protected



more than 3 secs



Contact maintained for less than 3 secs

=

The next opening will not be protected




less than 3 secs



TEST

A - Block the cover manually or use the fastening equipment, and open the pool.


=> The motor is stopped automatically
(if required, adjust the triggering sensitivity setting)

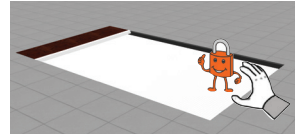


Card activated		Indicator light	O	F
	Opening, check underway			
	Open without check			
	Close			
	Protection triggered			

! If you notice that triggering is occurring at random times, reduce the triggering sensitivity by increasing the setting to one designed for a wider pool.

INSTALLATION

 **Any person carrying out work on the electrical parts must be qualified and wear PPE (personal protective equipment): gloves, goggles, mat, etc...**

 **Warning: use of the pool cover control switches present in the housing (Wi-Key receiver) must only be carried out by a person who is absolutely certain that there is no risk and that no-one will enter the pool during the operation.**

GENERAL INFORMATION / CALIBRATING THE LIMIT SWITCHES (MOTOR DL & PL)

The power-on is done via the illuminated switch on the side of the electrical cabinet. As soon as the power is turned on, the switch lights up. You can check the initialization of the electronic board on the INFO display for a few seconds.

The electrical cabinet is designed for a maximum of 10 minutes of continuous operation. Beyond that, allow 30 minutes between operations. In case of overheating of certain components, the board enters self-protection mode and stops powering the motor until it cools to a safe temperature.

The operating range of the electrical cabinet is between 0°C and 50°C maximum.

Three operating modes are available and should be well understood by the installer.

AUTOMATIC MODE: This is the normal usage mode of the board when all programming has been done correctly. Advanced functions can be enabled, and alarms are active.

FORCE MODE: This is the typical mode for maintenance operations. Once entered into force mode, all configurations (limit switches, measured current levels, etc.) are overwritten, and the operator uses the motor without limit switches. This mode should be used with great care. It can also be used in case of sensor failure.

PROGRAMMING MODE: This is the mode that allows the operator to record the fundamental parameters for using the board in AUTOMATIC MODE. You enter PROGRAMMING MODE when you need to configure limit switches and the end of the speed ramp. In this mode, advanced functions are not active, as well as some alarms.

NOTE: For activating advanced functions, once the corresponding switch is activated, you will always need to restart the board using the illuminated power switch. This operation requires re-reading the parameters and active functions.


INSTALLATION

AFTER COMPLETE WIRING



For the PL 7710 and DL 7710 motors :

1. Activate the dip-switch "CONF 2"
2. If necessary, turn off the control box and turn it back on.

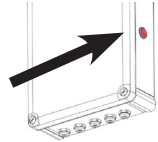


▶ CHECK THE DIRECTION OF THE COVER MOVEMENT INSIDE THE CONTROL BOX

To perform this check, use the FORCING mode by activating the dip-switch "FORCED." This operation is very important and should be extended to any potential control devices for the cover, such as remote controls, smartphone receivers, etc.



 Verify that the cover opens the pool for swimming when pressing the OPEN button and closes when pressing the CLOSE button.



- If it's OK, deactivate the FORCING mode by deactivating the dip-switch "FORCED"




- If not, swap the two power wires at the motor terminal block and check the proper operation; then verify the wiring of the key switch on the terminal block.



Only wire the key switch after checking the correct direction of movement by pressing the OPEN and CLOSE buttons.

▶ CHECK THE DIRECTION OF THE COVER MOVEMENT WITH THE CONTROLS

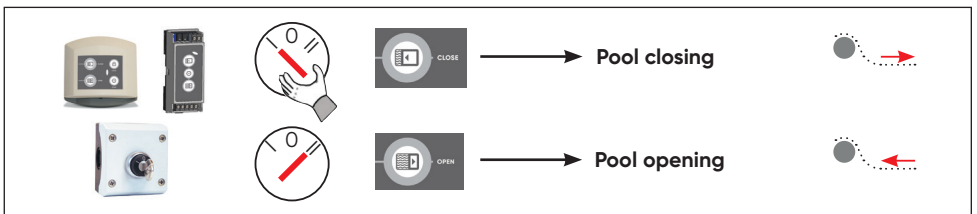

If the control logic is not followed, check the Open / Close wiring of the control

INSTALLATION

PROGRAMMING MODE

 
▶ LIMIT SWITCH PROGRAMMING

The limit switch programming must be done with full visibility of the pool.



NEVER USE REMOTE CONTROLS OR RADIO DEVICES FOR SETTING THE LIMIT SWITCHES. The procedure must be carried out with the key switch or with the "OPEN" and "CLOSE" buttons on the board.

1. Check the direction of the cover movement (for more information, refer to the specific chapter above).
2. Press the "OPENED" button and hold it until the green LED next to it lights up. You have entered the "open" limit switch programming mode.
3. Set the cover to the rolled-up position (fully open).
4. Wait at least 5 seconds, then press the "OPENED" push button - The green LED turns off and the position is saved.
5. Press the "CLOSED" button until the green LED next to it lights up. You have entered the "closed" limit switch programming mode.
6. Set the cover to the unrolled position (fully closed). Ensure that no one is using the pool beforehand.
7. Wait at least 5 seconds, then press the "CLOSED" push button - The green LED turns off and the position is saved.



Now the limit switches are programmed, and the board operates in "AUTOMATIC" mode.

INSTALLATION

AUTOMATIC MODE

This mode allows the opening and closing of the cover during normal use, with automatic stop at the end of travel.

The cover is controlled in opening or closing by various control devices (switch, wall remote, keychain remote, etc.). The cover is automatically stopped at the pool ends by the previously programmed distance (see programming mode).

When the cover is at one end of the pool, you will not have a choice of movement direction; one direction temporarily becomes invalid: the closing direction will not work when the cover is in the fully closed position, and vice versa, the opening direction will not work when the cover is in the fully open position (see manual mode to override the programmed distance if needed).

All alarms are activated as well as any advanced functions selected by the user.

SERVICING/MAINTENANCE

INFO DISPLAY

The INFO display shows any alarms that allow the operator to detect and correct anomalies.

If two alarms are present at the same time, the display will show them in rotation, one after the other.

The acknowledgment of alarms is done using the motor control device (key switch or remote control); by pressing the device twice in the same direction, the alarm will be acknowledged, and the motor can then be restarted.

The list of alarms is as follows:

0	FIXED	Board startup error
1	FIXED	Limit switch programming error
2	FIXED	The motor is not wired
3	FIXED	Faulty sensor
4	FIXED	Blown fuse
7	FIXED	Anti-tear alarm activated; check the straps
8	FIXED	Motor overload
d	FIXED	Major fault on the motor drive

▶ ANTI-TEAR




This function is specifically developed for pool covers equipped with securing systems (fasteners, straps, etc.) on the last slat, which allow attachment to the pool wall. On these covers, if the user forgets to release the cover before opening the pool, the motor could tear the fastenings and damage the cover. In this case, the function allows the motor to stop automatically when a certain current threshold is exceeded.

The function is activated by setting dip-switch 6 to ON and restarting the electronic board.

NOTE: The Anti-tear function is not compatible with the "Ampere monitoring" function described in the next paragraph. Only one function should be activated at a time.

SERVICING/MAINTENANCE

INTERVENTION AND TROUBLESHOOTING

-  **To be carried out only by qualified personnel.**
-  **Before any intervention on the control box and after cutting off the power supply upstream of the box, wait 15 seconds for the capacitors to dissipate their residual energy.**
-  **In case of malfunction of the control box or interventions other than the programming mode, manual mode, or pairing, activate the electrical separation device upstream.**

DIAGNOSTIC TABLE

DETECTED PROBLEM	ALARM CODE	TROUBLESHOOTING ACTION
When activating the main switch, the control box does not start.		Check the wiring to the power supply. If the wiring is correct and single-phase current is present, check the ceramic fuse on the power supply input. If the error persists, replace the entire control box.
When activating the main switch, the initialization sequence ends with an alarm.	0	Turn off the board and restart it. If that does not work, perform a restart with the forced mode activated, which will overwrite the data. If the error persists, replace the entire control box.
After the first startup, the board starts correctly, the motor wiring is correct, but the motor cannot be activated.	No Action	Put the board in forced mode to overwrite any previously saved settings; reprogram the limit switches. Without programming, the motor can only move if forced mode is active or if the limit switch "open" programming has begun.
During the limit switch programming, alarm 1 is activated.	1	This alarm informs the user that the end of travel position has been exceeded. If there is no real reason for this issue, activate FORCED mode to overwrite the old values and then reprogram the limit switches. Acknowledge the alarm.

SERVICING/MAINTENANCE

DETECTED PROBLEM	ALARM CODE	TROUBLESHOOTING ACTION
During the course end programming or normal use, alarm 2 is triggered.	2	The motor power Cables (red and gray) are not properly connected to the control box, or there is a wiring issue between the motor and the control box. Carefully check the wiring to resolve the issue. You can switch to forcing mode to check if the motor is correctly connected. If there's no solution, the motor might be broken or short-circuited. Try powering it with batteries for a final confirmation or connect the motor directly to the control box without any intermediate wiring.
The display shows alarm 3 during motor operation, causing it to stop; the motor doesn't start, and alarm 3 is displayed.	3	This alarm is triggered if more than 3 seconds pass between two pulses from the sensor. First, check the sensor wiring. If there are no wiring issues, switch the board to FORCING mode and check if the motor runs at normal speed when operated manually. In this case, the internal sensor in the motor is broken and must be repaired by UNICUM. Until the replacement intervention, the cover can be used cautiously in forcing mode.
The motor doesn't start, and alarm 4 is displayed.	4	One of the fuses has blown; turn off the board completely and wait about 15 seconds. Disconnect it from the power supply. Disassemble and check the different fuses with a tester, and replace the faulty fuse. Restart the board and check the motor's proper functioning.

SERVICING/MAINTENANCE


DETECTED PROBLEM	ALARM CODE	TROUBLESHOOTING ACTION
The motor stops and alarm 7 is displayed.	7	The anti-tear function is active, and a current threshold breach was detected during the first few seconds of opening the cover. Check the straps and ensure no obstacles are preventing the motor from advancing. Acknowledge the alarm. If the alarm reactivates, set the option switch to OFF.
The motor stops and alarm 8 is displayed.	8	The motor is overloaded and has been stopped to prevent damage. This alarm is triggered when the time between two pulses from the sensor is greater than 3 seconds and a high current value is measured. Acknowledge the alarm and analyze the situation to find the cause that triggered the alarm.
Activating a function with the appropriate dip-switch does nothing.		To fully activate advanced optional functions such as the safety loop or impulse mode at opening, you must always reset the board by turning it off and then turning it back on.
The motor stops suddenly.	d	The drive controlling the motor has suffered an electrical shock and may be damaged. If the alarm persists after acknowledgment, the defective board must be replaced.

SERVICING/MAINTENANCE

FUSE REPLACEMENT



Replace the fuses with the control box completely powered off. Failure to follow this safety standard poses a high risk of electric shock. This operation must be carried out by trained and qualified personnel.

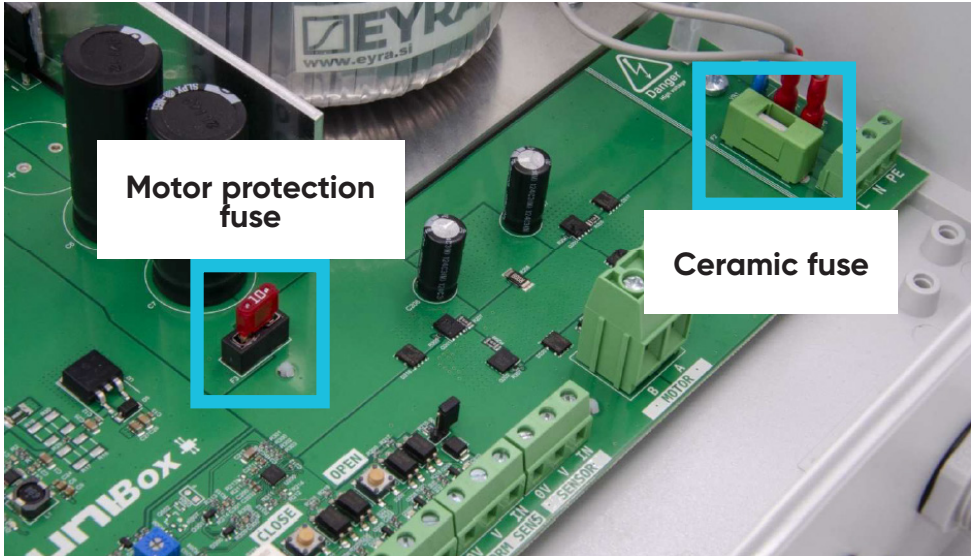

Motor Protection Fuse:

- 10A for Unibox 120VA and 250VA.
- 15A for Unibox 450VA.

COMPLETE RESET OF THE ELECTRONIC BOARD


To completely erase the memory of the electronic board, follow these steps :

1. Turn all the dip-switches for advanced functions to OFF.

2. Set the FORCED dip-switch to ON

3. Then, turn the dip-switch to OFF.

4. Restart the board.

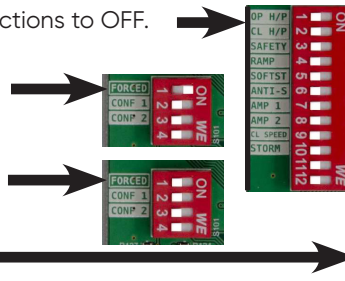


SERVICING/MAINTENANCE

▶ MOTOR CONTROL FROM THE CONTROL BOX DURING MAINTENANCE

! The use of these buttons is strictly prohibited without visibility of the pool.

During maintenance and troubleshooting, it is possible to control the movement of the motor directly from the control box; this usage method is not allowed if the pool is not directly visible and cannot be monitored during the movement of the cover.

The "OPEN" and "CLOSE" buttons allow you to open or close the cover at any time, even in the absence of a key-controlled controller.

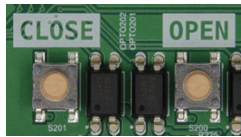

SERVICING/MAINTENANCE

Any person carrying out work on the electrical parts must be qualified and they must comply with the manufacturer's instructions in addition to the applicable standards and regulations.



During any intervention, the technician must wear PPE (personal protective equipment): gloves, goggles, mat, etc...

We recommend that the installation be disconnected from the power prior to any intervention taking place.

WATER LEVEL IN POOL

- In order to ensure maximum safety and correct operation of the rewinder, always check that the water level in the pool remains constant and complies with the manufacturer's requirements (for greater comfort, use an overflow and a water level regulator).
- A water level that is too high is due to the overflow being obstructed by leaves or other items.
- A water level that is too low means that there is a risk of blockage.
- In case of a recess or a handrail, the water level must be controlled by a level regulator.

WATER FILTRATION AND TREATMENT

- Programme filtration to take place at a time when the sun is shining on the pool and ensure that it is set to work all the time when the water reaches 28°C.
- In order to ensure that your installation will last, the water in the pool must be correctly treated in compliance with the applicable standards and recommendations (NF EN 16713-3).
- The pH, hardness and alkali levels of the water must be checked and adjusted as often as is necessary (although you will need to ensure that you don't correct these three parameters independently of each other but do so using the Taylor table and provide the water with balance with regard to the three parameters analysed).

CARE (RESPONSIBILITY OF THE CUSTOMER)

- Clean your slatted cover thoroughly twice a year (when opening the pool for the season and when winterising it). This is even more important if your pool water is hard. To do this, use a descaling cleaner (see catalogue) and rinse with a water spray.
- Inspect the entire system if an abnormal load is placed on the cover (such as in the event of a fall).
- Inspect the straps annually.
- Do not run, walk with care, the surface of the decking can be made slippery by poor maintenance.
- Take care to clean the decking regularly so that their surfaces do not become slippery.
- If the decking become slippery, remove them and clean them mechanically.
- Cleaning and maintenance by the user must not be carried out by unsupervised children.

SERVICING/MAINTENANCE








MAINTENANCE (ONCE PER YEAR MINIMUM)

- All interventions must be carried out by a professional, who will contact the manufacturer if necessary (contact details on the back page of this document).
- All spare parts must come from the manufacturer or comply with standard NF P90-308.
- Check that the installation is working correctly.
- Inspect the cover thoroughly.
- It is necessary to check at the start of every season and if any accident has occurred (if anything has fallen onto the cover, if hail has struck the cover, if the cover has had to bear any abnormal weight etc...) ensure that none of the slats has sustained any visible damage that may affect the safety of the cover (cracked slats, holes, deformations, etc...). Make sure that you change the slats or the entire cover if required.
- In winter as in summer, do not place an opaque sheet over the cover: this may damage the slats due to high temperatures.
- Once a year, check that the electrical connections are sufficiently tight.
- Customer service: contact details on back page of document

MAINTENANCE

WINTERING CRANK – OPTION


Aim: to allow the motor to overwinter while ensuring that the pool is safe.

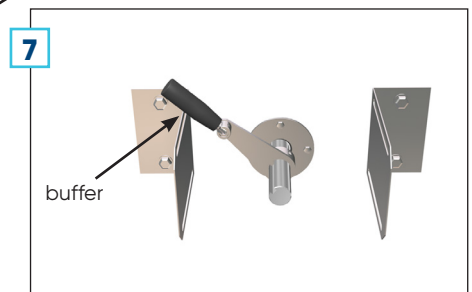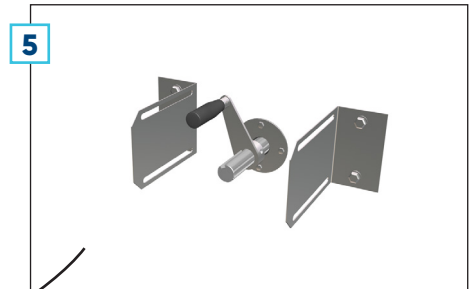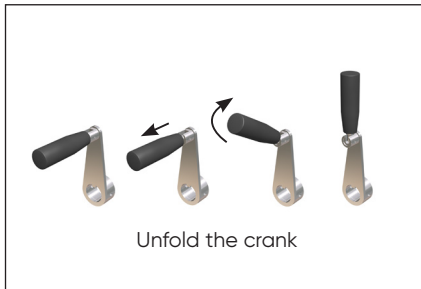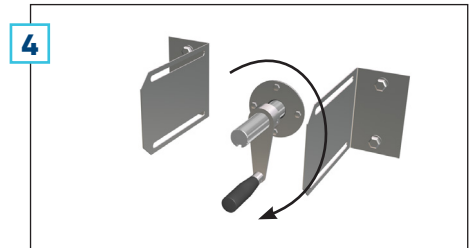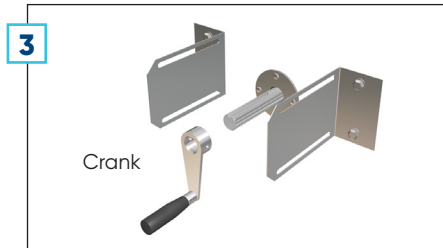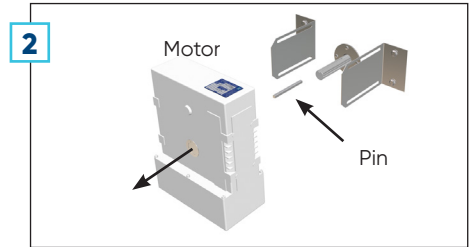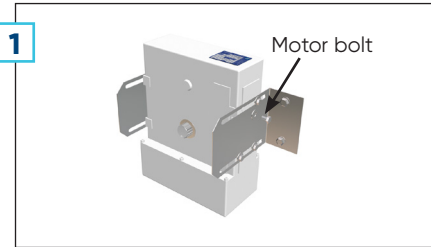

SERVICING/MAINTENANCE

WINTERING

 - Position the cover in the closed position and keep the water level constant in accordance with the manufacturer's recommendations.



- Winterise the pool according to its geographical location.
- Close the cover in the safety position.
- We recommend installing an Ivernéa winter cover or an Ivernéa Plus protective cover to protect the cover from UV rays and dirt.

SERVICING/MAINTENANCE

SPARE PARTS

Online catalogue :



<https://www.my-cfgroup.fr/fr/pièces-detachees>

TROUBLESHOOTING GUIDE



In-ground pool cover :

<https://view.publitas.com/cfgroup/quick-troubleshooting-guide-Unibox-en/>



In-ground pool cover dry box :

<https://view.publitas.com/cfgroup/guide-depannage-volet-immerge-coffre-sec-fr/>



Wi-Key :

<https://view.publitas.com/cfgroup/quick-troubleshooting-guide-Wi-Key/>

REGULATIONS

WARRANTY CONDITION

log on to www.del-piscine.fr to consult all our guarantees.



<https://www.del-piscine.fr/rechercher-une-garantie>

SAFETY ADVICE

We recommend that you carefully read the recommendations below.

WARNING

- **Swimming pools can represent a serious danger for your children. Drowning can happen very quickly.**
Children who are close to a swimming pool need to be watched constantly and actively, even if they know how to swim.
- **The physical presence of an adult is absolutely essential whenever the pool is open.**



- Learn lifesaving skills.
- Memorise the telephone numbers for the emergency services and ensure that they are displayed close to the pool.



 
SAFETY ADVICE

- This section is by no means a replacement for common sense or individual responsibility. Its aim is not to replace the vigilance of parents and/or responsible adults, who remain the essential factor in ensuring the protection of young children.
- **Warning:** safety is only guaranteed when the cover is closed, locked and correctly installed in compliance with the manufacturer's instructions.
- The cover must systematically be closed if you are absent from home, even for a very short period.
- Check that no persons and no foreign objects are in the pool before and during opening and closing operations.
- Make sure that you place all of the tools required for moving the pool cover out of the reach of children (e.g. the key).
- The operation of the mechanism must only be carried out by a responsible adult.
- Climbing, walking or jumping on a pool cover is strictly forbidden.
- Take all necessary measures to prevent access to the pool for young children until the cover is repaired or when a malfunction is observed that prevents closing or in case of temporary unavailability of the equipment or the pool.
- Respect the water levels designated by the manufacturer.

A child can drown in less than 3 minutes, no type of protection can ever replace the watchful eye and vigilance of a responsible adult.

RECYCLING

PACKAGING




Dispose of the packaging in line with current rules and regulations.

END OF LIFECYCLE



- Do not put your scrapped equipment or used batteries in with unsorted household waste.
- You are responsible for disposing of all of your waste, in particular electrical and electronic equipment by taking it to a collection point where recycling and valorisation are carried out.
- Certain products potentially contain substances that are dangerous for the environment, and you need to ensure that these are eliminated or neutralised.
- Make sure that you are aware of all existing recovery and collection systems.

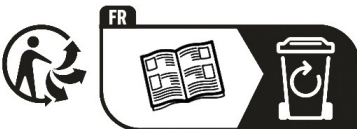

discard the manual in line with the current regulations.




Adresses sur quefairedemesdechets.fr

NOTES



NOTES





NOTES



DEL SAS
ZA LA BASSE CROIX ROUGE
35530 BRÉCÉ - FRANCE

☎ +33 (0)2 99 00 17 72

STAMP

A brand by CF group



ORIGINAL INSTRUCTIONS

A-DOTE03507L1 / 03 2025